
What do the LED lights on the top of the Moby/8500 indicate?

Posted: Jul 22, 2021

There are 4 LEDs on the top of the Moby/8500 used to indicate progress of a transaction.

- **Blue** - For contactless transactions, indicates that the Reader is waiting for card. The Reader will also beep, indicating you should swipe or tap the card.
- **Yellow** - Indicates the Reader is reading the card.
- **Green** - Indicates the card read was successful.
- **Red** - Indicates a card processing error.

Note: The yellow and green lights turn on and off quickly.
