


## How to Remotely Update Reader Firmware

Posted: Mar 15, 2018

Please note: Your reader must be paired via Bluetooth before performing Remote Firmware Update (RFU). To connect, please see the section on [Connecting Via Bluetooth](#) for your specific reader.


If your reader requires an update, you should be prompted on login with the following notification:

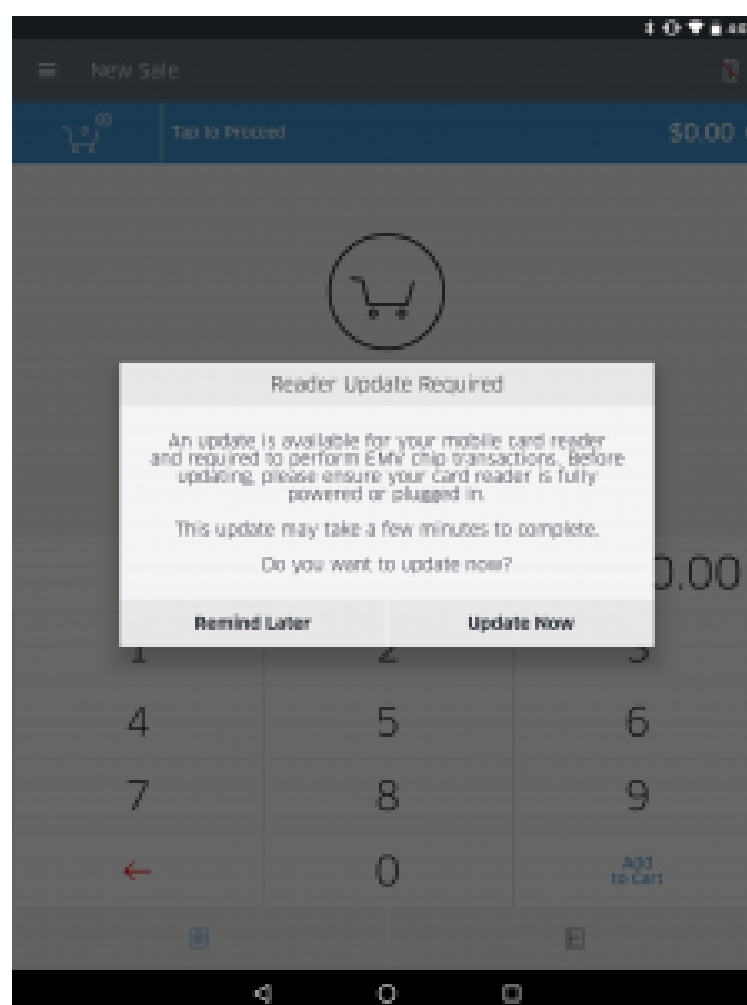


Here, click **Update Now** to begin the RFU process.

If you are not prompted, you can check for firmware updates at any time by following the process outlined [here](#).


1) Once you begin the update, you will see the application begin to download the update:

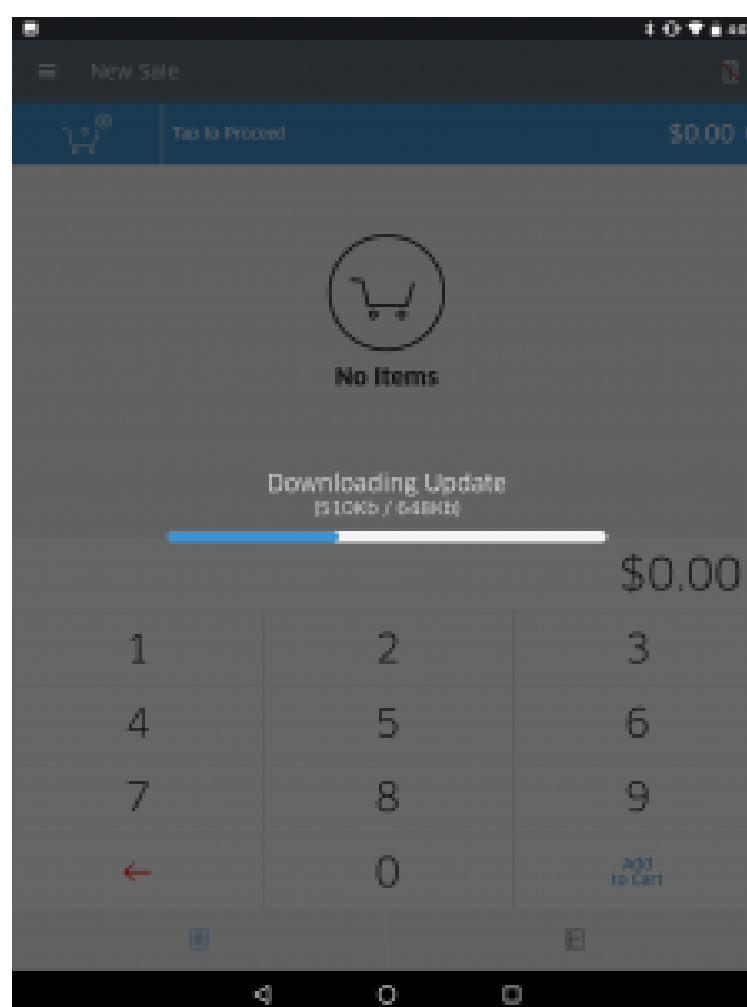

2) Once the update finishes downloading, the application will begin the install process.

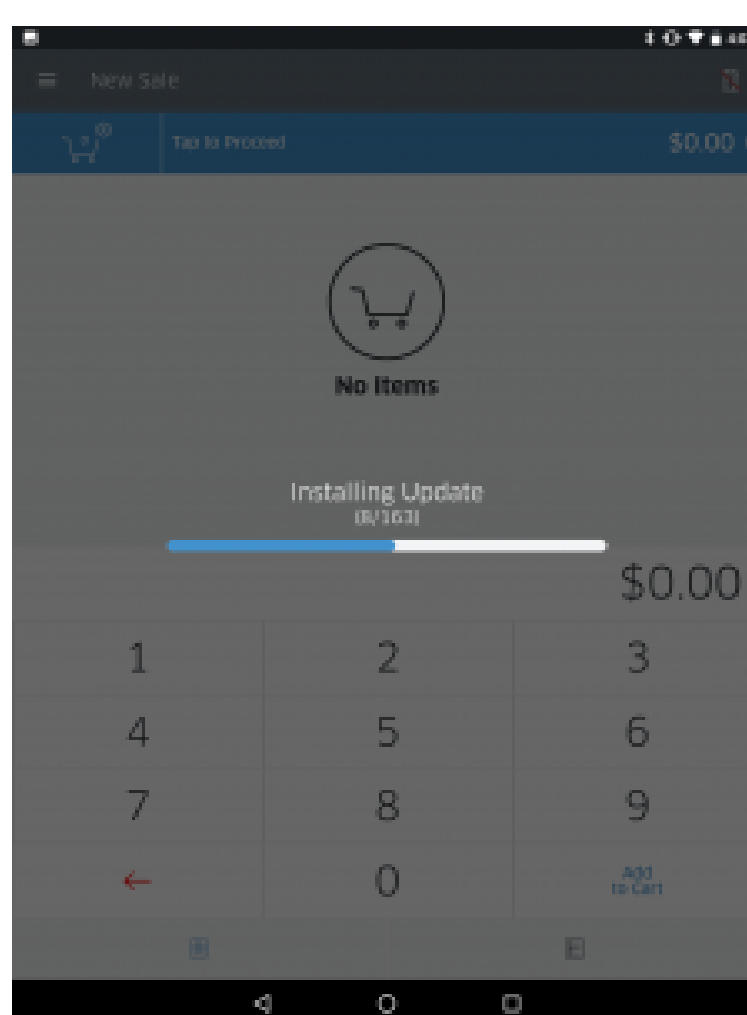

3) If successfully installed, you will see the **Reader Update Successful** dialogue.

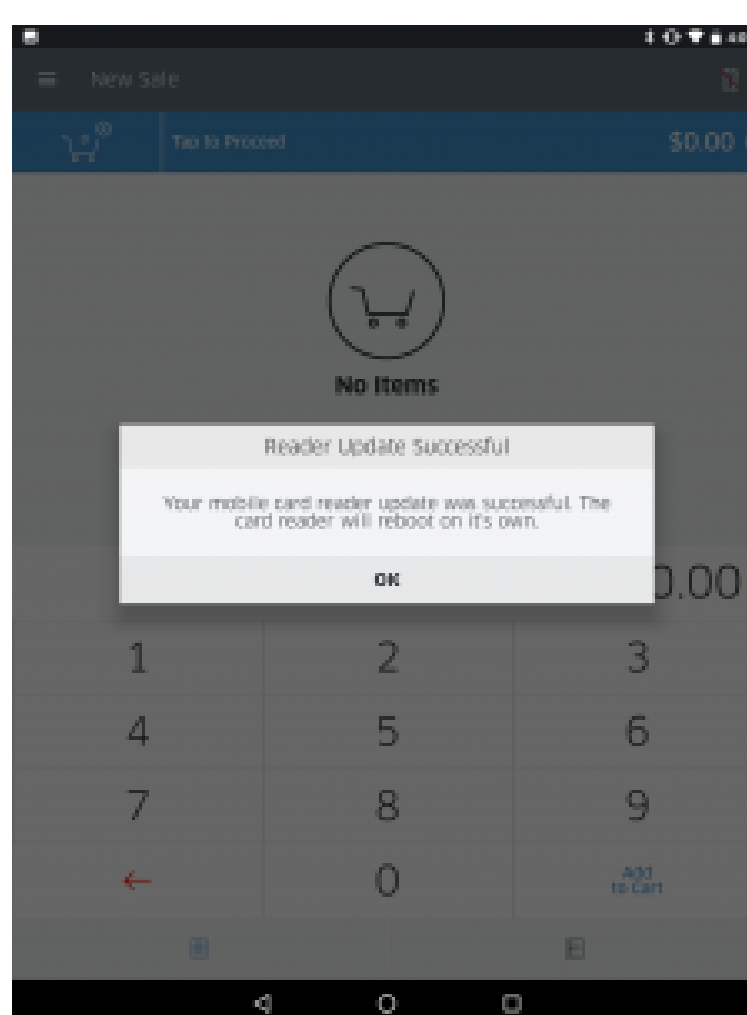

4) Finally, navigate to your **Bluetooth Readers** page in the Settings, and click on your reader to finish setting up & connect.

