



GET STARTED




STEP 1 Open the box

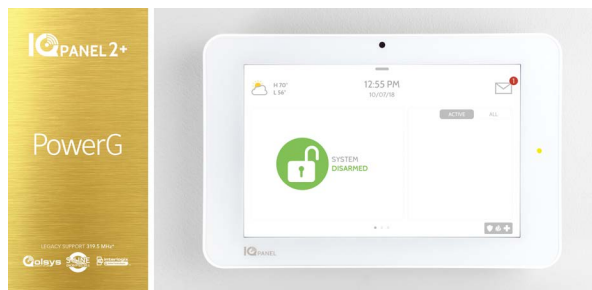

**Locate your new All-In-One Touchscreen,
power supply and table stand**

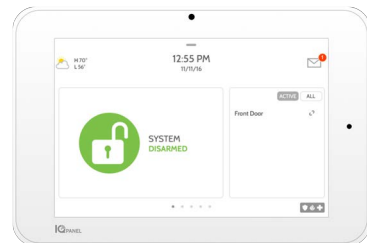

STEP 2 Power Up the Panel

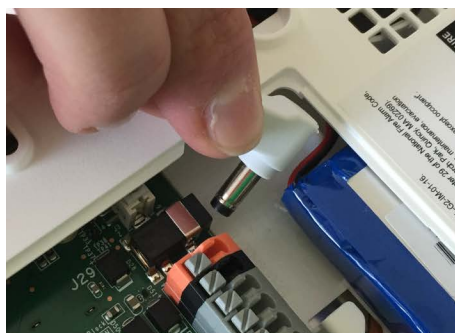

Plug in the power connector



Hook the wire in the strain-relief




Push the cover down until it snaps in place



**Insert the table stand into the mounting holes
and push upward until it snaps into place**




Plug in the power supply

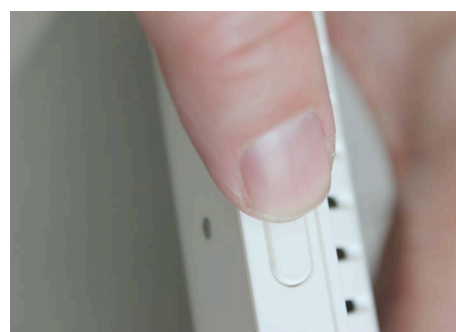

**Push and hold the standby button on the side
of the panel for 3 seconds**


STEP 3 Initial Settings

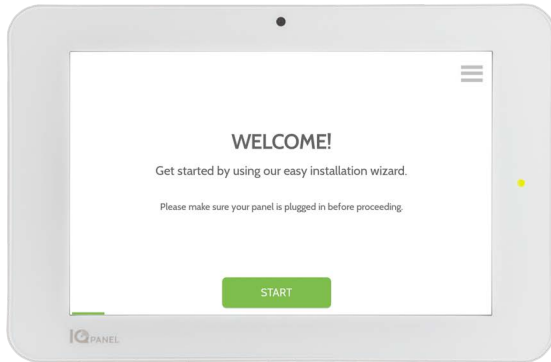


Follow the steps in the on-screen wizard to:

- Connect Wi-Fi
- Run system test
- Download cloud settings


STEP 4 Pair Door/Window Sensors

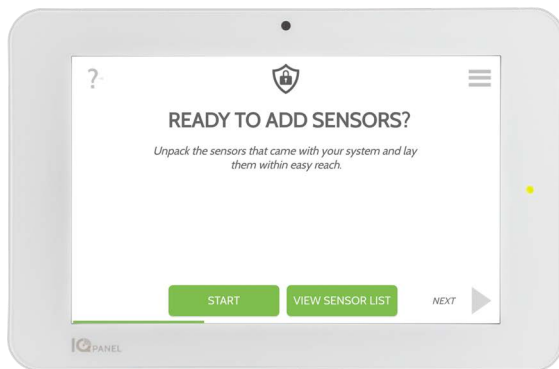


When you get to this page, locate your door/window sensors. Open each box and locate the adhesive.

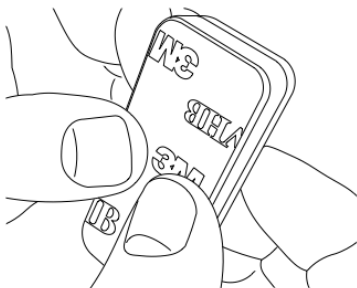


Apply the adhesive.

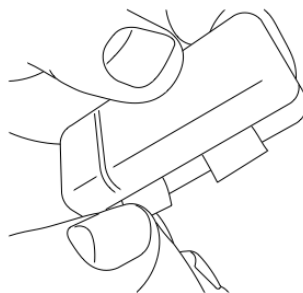

Remove the two battery tabs.

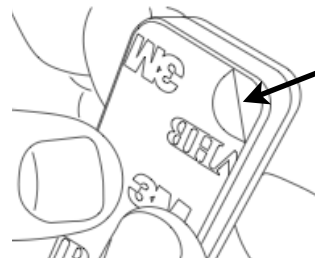

Remove the protective film.

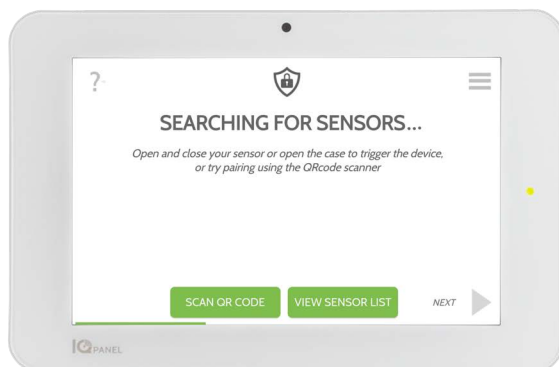

Click "Start" and when you get to this page, open and close your sensor.

- Panel should detect it
- Give it a name
- Click "Save"
- Repeat for each sensor



STEP 5 Place Door/Window Sensors


BEST

OPTION


(IF BEST DOESN'T FIT)

IMPORTANT!


The distance between the magnet and the sensor should be no larger than a pen

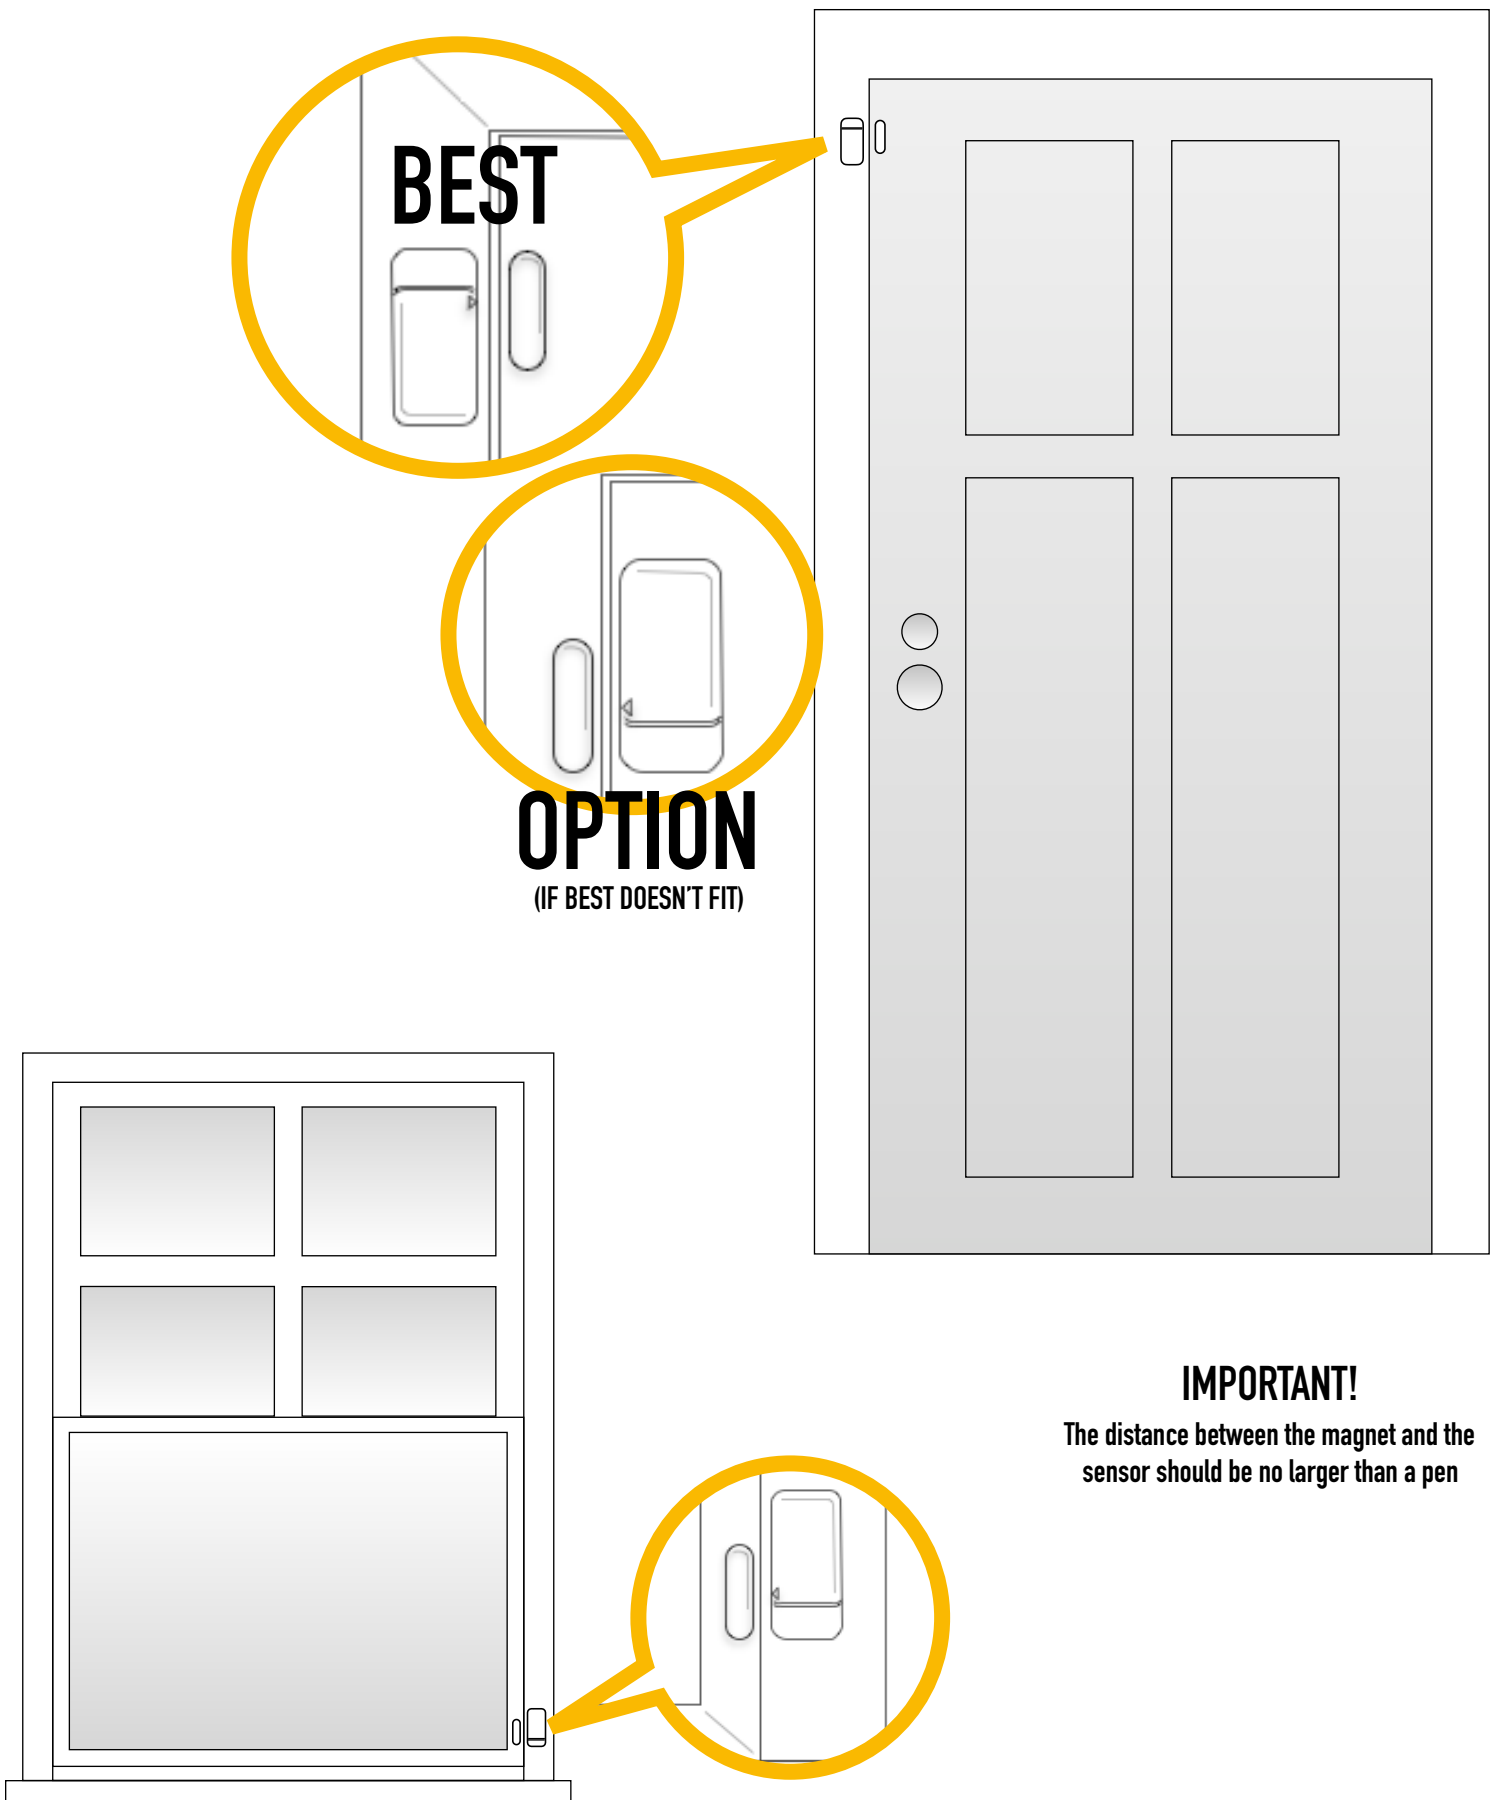


STEP 4 Pair Motion Sensors

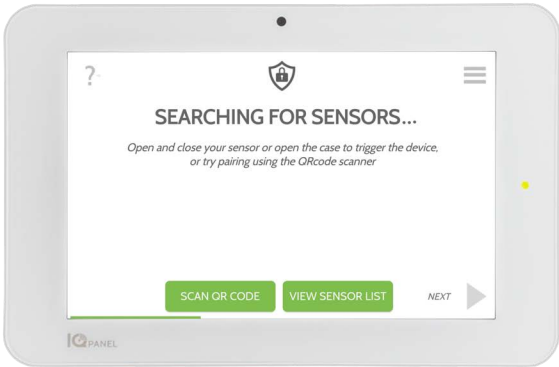


When you get to this page, locate your motion sensor. Open the box and locate the adhesive.

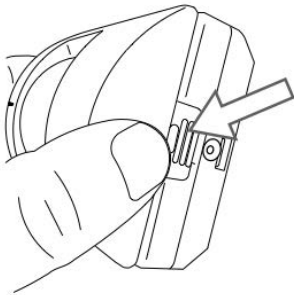


Open the device to remove the back plate.

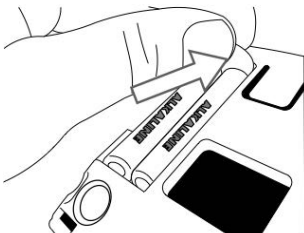


Remove the battery tab.

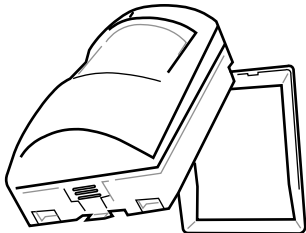

Re-install motion device to the backplate.

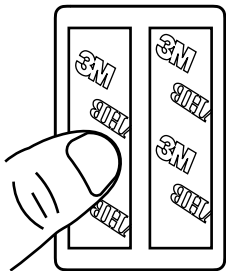


Apply the adhesive to the backplate

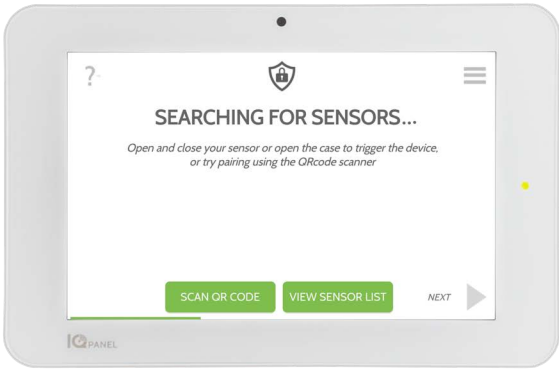


As soon as your batteries start working the panel should detect your sensor.

- Give it a name
- Click "Save"

If the system does not automatically detect your sensor, try waving your hand in front of it

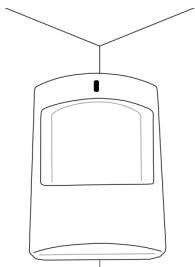


Corner install

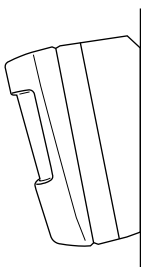


Wall install


Reduce False Alarms: When possible, avoid installing your motion sensor near ceiling fans, heating ducts, or pointed toward windows.

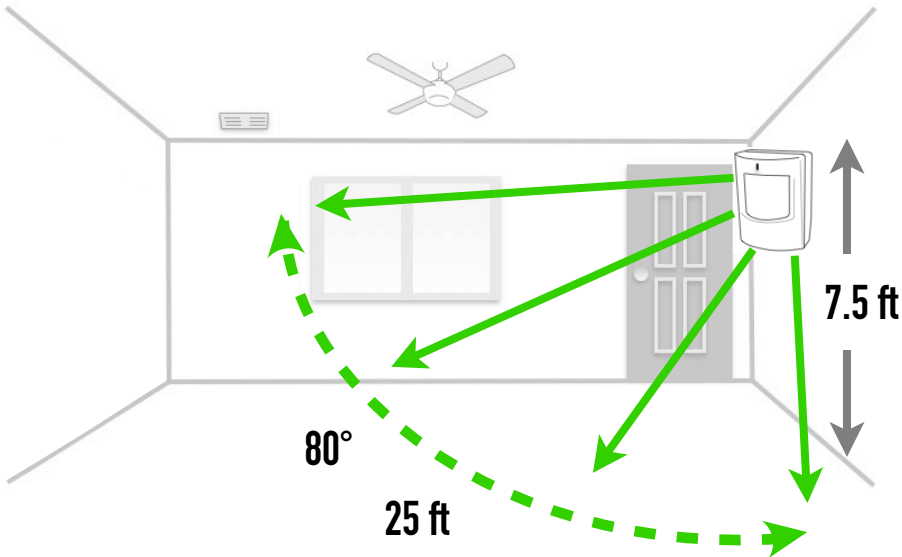



STEP 5 TEST YOUR SENSORS

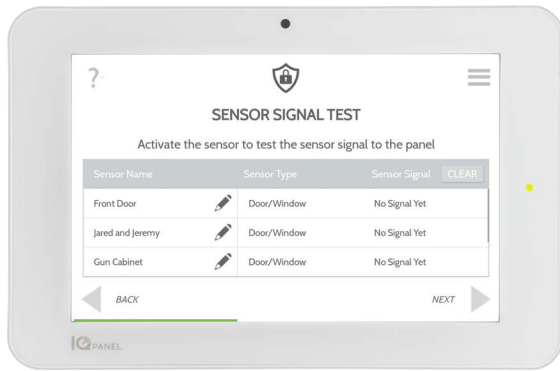

When you get to this page your system begins checking your sensors to ensure everything is working properly. Open and close each door or window several times and wave your hands in front of the motion sensor. Results on screen. (If your results are not “Excellent” or “Good” consider changing panel location.)

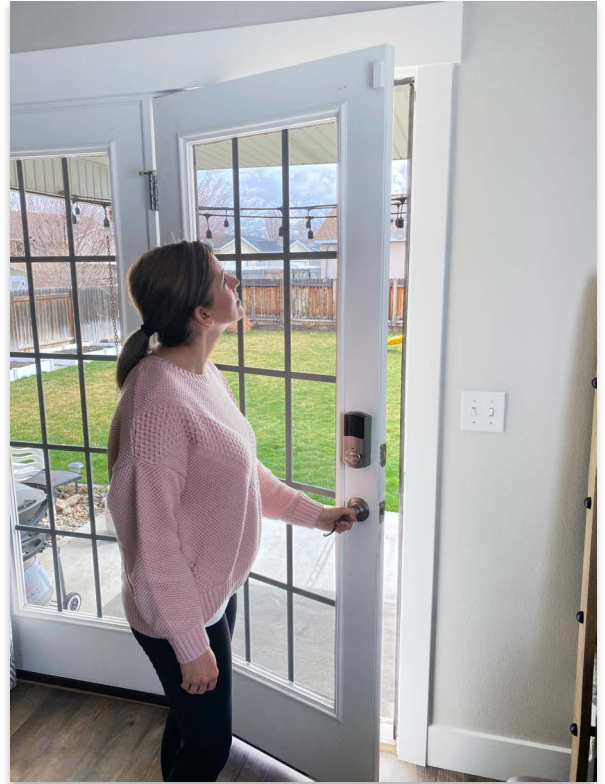


STEP 6 ADD YOUR Z-WAVE DEVICES

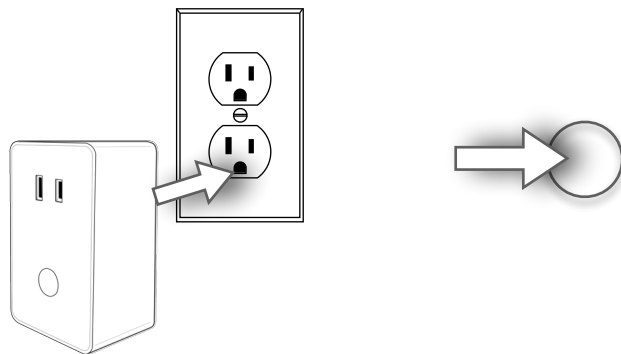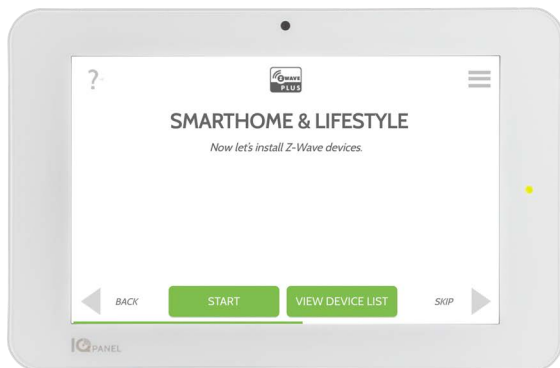

If your system includes Z-Wave devices like lamp modules, locate them and plug them in. If not, skip to the next step.


Follow the prompts on the screen to clear then pair your new devices. PLEASE NOTE: After adding your devices, the system will prompt you to test the connections. Be sure they are in their “final” installation locations before starting this test

STEP 7 PAIR BLUETOOTH

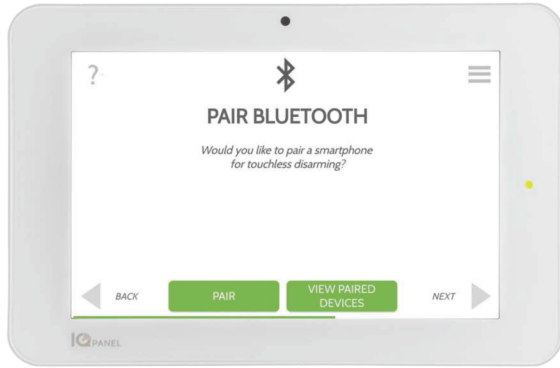

Follow the prompts on the screen to add your phone for Touchless Disarming.

STEP 8 ADD USERS

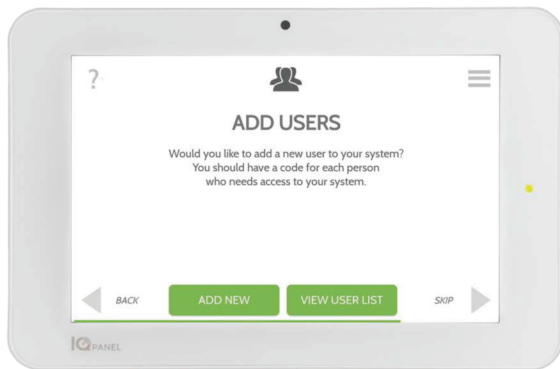

Follow the prompts on the screen to add users. The system supports up to 242 unique users.

Master: Can access settings

User: Can arm/disarm

Guest: Access with an expiration date

STEP 9 CALL TO ACTIVATE

Call us to fully activate your system.

828-428-0059